

www.alcatelonetouch.com

For more information on how to use the phone, please go to www.alcatelonetouch.com and download the complete user manual. Moreover, on the website, you can also find answers to frequently asked questions, and so much more.



smart move.



smart move.

Table of Contents

fety a	and use	5
nera	l information	12
You	r mobile	13
1.1		
1.2	Getting started	16
1.3	Home screen	19
Tex	t input	29
2.1	•	
2.2	-	
Pho	ne call, Call log and Contacts	32
3.1		
3.2	Call log	38
3.3		
Mes	saging, Email	47
4.1		
4.2		
4.3	Google Hangouts	59
Cale	endar & Time	62
5.1		
5.2	Time	64
	You 1.1 1.2 1.3 Tex 2.1 2.2 Pho 3.1 3.2 3.3 Mes 4.1 4.2 4.3 Cale 5.1	1.2 Getting started 1.3 Home screen Text input 2.1 Using the Onscreen Keyboard 2.2 Text editing Phone call, Call log and Contacts 3.1 Phone 3.2 Call log 3.3 People Messaging, Email 4.1 Messaging 4.2 Gmail/Email 4.3 Google Hangouts Calendar & Time 5.1 Calendar

6	Get	ting connected	66
	6.1	Connecting to the Internet	66
	6.2	Browser	68
	6.3	Connecting to Bluetooth devices	75
	6.4	Connecting to a computer	77
	6.5	Sharing your phone's mobile data connection	78
	6.6	Connecting to virtual private networks	79
7	God	ogle Play Store	81
	7.1	Locate the item you want to download and install	81
	7.2	Download and install	82
	7.3	Manage your downloads	84
8	Mul	ltimedia applications	86
	8.1	Camera	
	8.2	Gallery	89
	8.3	You Tube	
	8.4	Music	92
	8.5	Video Player	94
9	God	ogle Maps	95
	9.1	Get My Location	
	9.2	Search for a location	
	9.3	Star a location	96
	9.4	Get driving, public transportation or walking directions	98
	9.5	Arrangement of Layers	99

10	Oth	ers	100
	10.1	Calculator	100
	10.2	File Manager	101
		Sound Recorder	
	10.4	Radio	102
	10.5	Flashlight	103
		Setup Wizard	
		Other applications	
П	Sett	ings	105
		Wireless & networks	
		Device	
	11.3	Personal	112
	11.4	Accounts	117
		System	

12	Making the most of your phone	124
	12.1 FOTA Upgrade	124
13	Accessories	125
14	TCT Mobile Inc. Warranty	126
15	Troubleshooting	129
16	Specifications	134



This product meets applicable national SAR limits of 1.6W/kg. The specific maximum SAR values can be found in the RADIO WAVES section of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 www.sar-tick.com mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Safety and use.....

We recommend that you read this chapter carefully before using your mobile phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile phone when the vehicle is not parked. Check the laws and regulations on the use of wireless mobile phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your mobile phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your mobile phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

-do not place your mobile phone on top of the dashboard or within an airbag deployment area.

-check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the mobile phone from time to time to optimize its performance.

Remember to abide by local authority rules of mobile phone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight. Switch the mobile phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile phones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the mobile phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the mobile phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the mobile phone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your mobile phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

It is recommended to have proper supervision while small children use your mobile phone.

Please note that your phone is a unibody device, the back cover and battery are not removable. Do not attempt to disassemble your phone. If you disassemble your phone the warranty will not apply. Also disassembling the phone may damage the battery, and may cause leakage of substances that could create an allergic reaction.

Always handle your mobile phone with care and keep it in a clean and dust-free place. Do not allow your mobile phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55° C (131°F) the legibility of the mobile phone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your mobile phone yourself.

Do not drop, throw or try to bend your mobile phone.

Do not use the mobile phone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your mobile phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your mobile phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your mobile phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your mobile phone or enabling a flashing-lights feature on your mobile phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the mobile phones.

All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your mobile phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- -Take a minimum of a 15-minute break every hour of game playing.
- -If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.-
- -If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Please note your phone is a unibody device, the back cover and battery are not removable. Observe the following precautions:

- Do not attempt to open the back cover,
- Do not attempt to eject, replace and open battery,
- Do not punctuate the back cover of your phone,
- Do not burn or dispose of your phone in household rubbish or store it at temperature above 60°C .

Phone and battery as a unibody device must be disposed of in accordance with locally applicable environmental regulations.



This symbol on your mobile phone, the battery and the accessories means that these products must be taken to collection points at the end of their

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at http://www.gowirelessgogreen.org/

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

CHARGERS

Home A.C./Travel chargers will operate within the temperature range of: $0^{\circ}C$ (32°F) to $40^{\circ}C$ (104°F).

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

8

Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 200 mA

Output: 5 V. IA

Battery: Lithium 2000 mAh

• RADIO WAVES:

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile phone while operating can be well below the maximum value. This is because the mobile phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the mobile phone. Before a mobile phone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model mobile phone when tested is $0.75\,W/Kg$ for use at the ear and 1.15W/Kg for use close to the body.

While there may be differences between the SAR levels of various mobile phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the mobile phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 10 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: http://www.ctia.org/

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/peh-emf.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules and Industry Canada licenceexempt RSS standard(s). Operation is subject to the following two conditions:

- (I) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Your mobile phone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the mobile phone at least 10 mm away from the body.

LICENSES



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

ALCATEL ONETOUCH 6043A Bluetooth Declaration ID D022074



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance. 5 GHz Wi-Fi operation is for indoor use only.

Google, the Google logo, Android, the Android logo, Google Search TM , Google Maps TM , Gmail TM , You Tube, Google Play Store, Google Latitude TM and Hangouts TM are trademarks of Google Inc.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License (the text will show when you touch and hold **Google legal** in **Settings\About phone\Legal information**) ⁽¹⁾.

You have purchased a product which uses the open source (http://opensource. org/) programs mtd, msdosfs, netfilter/iptables and initrd in object code and other open source programs licensed under the GNU General Public License and Apache

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product by TCT. You may download the source codes from http://sourceforge.net/projects/alcatel/files/.The provision of the source code is free of charge from internet.

Hearing Aid Compatibility

Your mobile phone is rated: «For Hearing Aid», to assist hearing device users in finding mobile phones that may be compatible with their hearing devices.

This device is HAC M4/T3 compatible. Reference ANSI C63.19-2007

For more information please visit our website http://www.alcatelonetouch.com FCC ID: RAD493 $\,$

General information

- Website: www.alcatelonetouch.com
- Facebook: www.facebook.com/ALCATELONETOUCH
- Twitter: http://www.twitter.com/alcatelltouch
- Hot Line Number: In North America, call 855-368-0829 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com

Your telephone is a transceiver that operates on GSM/GPRS/EDGE in quad-band with 850/900/1800/1900 MHz or UMTS in dual-band with 850/1900 MHz.

Protection against theft (1)

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your mobile phone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the mobile phone's operation, depending on the software release of your mobile phone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

It depends on countries.


(I) Contact your network operator to check service availability.

Your mobile.....

I.I Keys and connectors





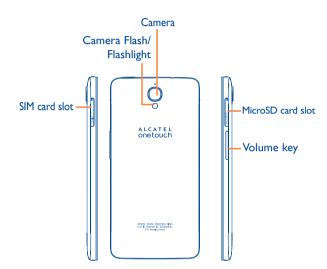

Back key

 Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.

Home key

• While on any application or screen, touch to return to the Home screen.

Menu key

- Touch to access Settings options.
- Touch and hold to open a list of thumbnail images of applications you've worked with recently.
- When the screen first lights up or is touched. (buttons have a timer on them.)

13

Power key

- Press: Lock the screen/Light up the screen
- Press and hold: Power on or generate a pop up menu providing more options, such as Power off, Restart, Airplane mode, etc.
- Press and hold Power key and Volume down key to capture a screenshot.
- Press to mute the ringtone when there's an incoming call.

Volume keys

- In call mode, adjust the earpiece or headset volume.
- In Music/Video/Streaming mode, adjust the media volume.
- Mute the ringtone of an incoming call.
- Press to light up the screen when it dims during a call.

15


I.2 Getting started

I.2.I Set-up

An insertion tool is provided with the phone package, please use it to install or remove the SIM/SD card conveniently.

Inserting or removing the SIM card

You must insert your SIM card to make phone calls. You do not need to power off your phone before inserting or removing the SIM card as this phone can support hot swap.

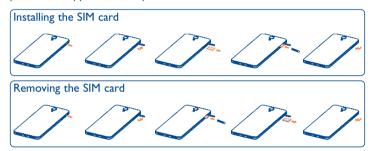

Before you install or remove the SIM card, press the raised dot on the card slot cover to open it. Insert the SIM card with the chip facing upwards until it locks in place. To remove it, press the SIM card until it releases.



Installing or removing the microSD card





Insert the external microSD card into the slot with the gold contact facing down until it locks. To remove the external microSD card, gently push it until it unlocks.



Before removing the microSD card, ensure the phone is off, to protect it from corruption or damage. In addition, regularly removing or inserting the SD card may cause the phone to restart.

Charging the battery



Connect the charger to your smartphone and wall socket.



If the battery is very low, there will be no indication that power is being received until the charge is sufficient to show the charging status bar. It may take up to 20 minutes to display the battery charger indicator on the screen. To reduce power consumption and energy waste, once the battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, Bluetooth or background-running applications when not in use, reduce the backlight time, etc. Also you may enable **Saving mode** in **Settings\Battery management**.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on, unlock your phone (Slide, PIN, Password, Pattern, Face unlock or Voice unlock) if necessary and confirm. The Home screen will then be displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your phone. Store this information in a safe place when not in use.

Set up your phone for the first time

Once you have powered on your phone for the first time, you should set the following options:

- Touch Get started..., then select the phone's language.
- Select your input keyboard, then touch Next.
- Set your date and timezone, you can also choose Automatic time zone, then touch Next.
- Setup your Google account: Touch Set up now. If you have a Google Account, touch Yes, then enter your user name and password. If not, please create a new Google account. Touch New, enter your name and then choose your email username. If the username is available, you need create password. After all configuration is done, you will own your Google account. If you forget your password, you can go to http://www.google.com/ to retrieve it. Touch Next to skip to the next step.
- Touch Next ,then the Setup complete screen displays, touch Finish to confirm.

When the phone is powered on, you can connect to a Wi-Fi network, without a SIM card inserted (refer to section "6.1.2 Wi-Fi"), to sign into your Google account and use some features.

1.2.3 Power off your phone

Hold down the **Power** key until the pop-up menu appears, select **Power off** to confirm. Holding the power button for 10 seconds will also power off the device.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the Home key to switch to Home screen. Drag the screen upwards to access the application list.



- Touch to open the application.
- Touch and hold to move or change applications.

Touch to enter application list.

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. The white squared dots at the lower part of the screen indicate which screen you are viewing.

Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



Touch and hold the home screen to access Widgets and Downloaded screen.

Drag



Place your finger on any item to drag it to another location.

Slide/Swipe



Slide the screen to scroll up and down the widget screen, photo screen, web pages... at your convenience.

Flick



Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place the fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better view.

1.3.2 Status bar

From the status bar, you can view both phone status (to the right side) and notification information (to the left side). **Status icons**

GPRS connected	0	Location is on
GPRS in use	Rall	Roaming
EDGE connected	ăıl	No SIM card inserted
EDGE in use	D.	Vibrate mode
3G connected	*	Ringer is silenced
3G in use		Battery is very low
HSPA (3G+) connected		Battery is low
HSPA (3G+) in use		Battery is partially drained
Connected to a Wi-Fi network		Battery is full
Bluetooth is on		Battery is charging
Connected to a Bluetooth device	Ü	Headset connected
Airplane mode	all	No signal (gray)
Alarm is set	all	Signal strength (blue)
	GPRS in use EDGE connected EDGE in use 3G connected 3G in use HSPA (3G+) connected HSPA (3G+) in use Connected to a Wi-Fi network Bluetooth is on Connected to a Bluetooth device Airplane mode	GPRS in use EDGE connected **III EDGE in use 3G connected **III EDGE in use 3G connected #*III EDGE in use #*III EDGE in use #*III #*IIII #*III #*III #*III #*III #*

Notification icons

on
a
d
od
etwork is
ed via
ailable
N

Touch and drag down the Status bar to open the Quick setting panel or Notification panel. Touch and drag up to close it. When there are notifications, you may touch and drag the Status bar with two fingers to access Quick setting panel directly.


Quick setting panel

Touch and drag down the Status bar to open Quick setting panel, where you can enable or disable functions or change modes by touching the icons.



Notification panel

When there are notifications, touch and drag down the Status bar to open the Notification panel and read the detailed information.

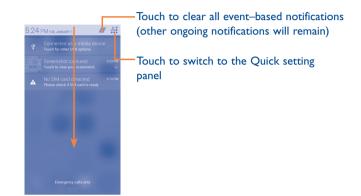

1.3.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.



Search by text

- Touch Search bar from the Home screen.
- Enter the text/phrase you want to search for.
- Touch on the keyboard if you want to search on the web.

Search by voice


- Touch U from the Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by choosing slide or creating a variety of patterns, PIN or password, etc.

To create a screen unlock pattern (refer to section "Screen lock"for detailed settings)

- Drag down the notification panel and touch and then the settings icon to enter Settings, then touch Lock settings\Select screen lock\Pattern.
- Draw your own pattern.

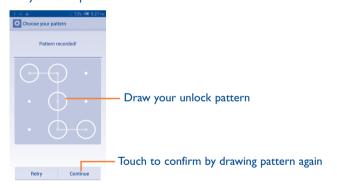

To create a screen unlock PIN/Password

- Touch Settings\Lock settings\Select screen lock\PIN or Password.
- Set your PIN or password.

To set up voice unlock

- Touch Settings\Lock settings\Select screen lock\Voice unlock.
- Touch Record and speak out your voice command (a command with 2-8 syllables, then repeat 3-6 times).

To set up Face unlock

- Touch Settings\Lock settings\Select screen lock\Face unlock.
- Hold the phone at eye level and show your face until the phone captures the face.

To lock phone screen

Press the **Power** key once to lock the screen.

To unlock phone screen

Press the power key once to light up the screen, draw the unlock pattern you have created or enter your PIN or password, etc. to unlock the screen.

If you have chosen **Slide** as the screen lock, touch and drag the screen to the right.



1.3.5 Personalize your Home screen

Add

You can touch and hold a folder, an application or a widget to activate the Move mode, and drag the item to any Home screen as you prefer.

Remove

Touch and hold the item you wish to remove, this will activate Move mode, drag the item to the top of the screen and release after the item turns red.

Reposition

Touch and hold the item to be repositioned to activate Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the favorites tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

27

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen, you can add them to a folder by stacking one item on top of another.

Wallpaper customization

Touch Menu key then touch **Wallpaper** to customize wallpaper.

1.3.6 Volume adjustment

Using volume key

Press **Volume** key to adjust the volume. To activate the vibrate mode, press the **Volume down** key until the phone vibrates. Press the **Volume down** key once more to activate the silent mode.

Using Settings menu

Drag down the notification panel and touch and then the settings icon to enter **Settings**, then touch **Sound**, you can set the volume of calls, notification, system and etc. to your preference.

2 Text input

2.I Using the Onscreen Keyboard


Onscreen Keyboard settings

From the home screen, select **Settings\Language&input**, touch the Settings icon on the right of **Android keyboard**, and then series of settings are available for your selection.

Adjust the Onscreen Keyboard orientation

Turn the phone sideways or upright to adjust the Onscreen Keyboard orientation. You can also adjust it by changing the settings (Touch **Settings**\ **Display\Orientation**).

2.1.1 Android keyboard

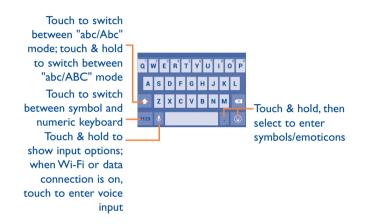

2.2 Text editing

You can edit the text you have entered.

- Touch and hold or double-tap within the text you would like to edit.
- Drag the tabs to change the highlighted selection.
- The following options will appear: Select all : , Cut : , Copy and Paste .
- Touch the icon to confirm.



You can also insert new text

- Touch where you want to type, or touch and hold a blank space, the cursor will blink and the tabs will show. Drag the tab to move the cursor.
- If you have selected any text, touch the tab to show **PASTE** icon which allows you to paste any text you have previously copied.



3 Phone call, Call log and Contacts.....

Phone



3.1.1 Placing a call

Touch \(\subseteq \) on the home screen to access the **Phone** application.

Dial screen





Touch to show the dialpad

Enter the desired number from the keyboard directly or select a contact from **People** or **Call log** by sliding or touching tabs, then touch \subseteq to place the call

The number you entered can be saved to **People** by touching : and **Add** to contacts.

To hang up a call, touch End.

International call

To dial an international call, touch and hold $\mathbf{0}_+$ to enter "+", then enter the international country prefix followed by the full phone number and finally touch **Call**.

Emergency call

If your phone has network coverage, dial the emergency number and touch **Call** to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.1.2 Answering or rejecting a call

When you receive a call, drag the sicon rightward to answer the call, leftward to reject the call, upward to reject the call by sending a preset message.



To mute incoming calls, press the **Volume up/down** key or turn the phone face down if **Turn over to mute** is activated. To activate, touch **Settings\Gestures\Turn over to mute**.

3.1.3 Calling your voicemail

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.

To access your voicemail, touch and hold 1 on the **Phone** tab.

To set your voicemail number, touch the **Menu** key and select **Settings\ Voice** call**Voicemail.**

If you receive a voicemail, a voicemail icon **QO** appears on the Status bar. Open the Notification panel and touch **New Voicemail** to hear it.

3.1.4 During a call

To adjust the volume during a call, press the Volume up/down key.



- Touch to hold the current call. Touch this icon again to retrieve the call.
- Touch to display Dialpad.
- Touch to add a call.

S

Touch to mute the current call. Touch this icon again to unmute the call.



Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.



Touch to start recording.



To avoid accidental touchscreen operations during a call, the screen will be locked automatically when you put the device close to your ear; it will be unlocked when the device is taken away from your ear.

3.1.5 Managing multiple calls

With this phone you can handle multiple calls at the same time.

Swap calls(1)

When you accept two calls, touch the joint icon, you can now switch between two lines. The current call is put on hold and you can join the other call.

Conference calls(2)

To set up a conference call:

- · Place a call to the first participant of the conference call.
- Touch the A icon.
- Enter the phone number of the person you want to add to the conference and touch icon Call. You can also add participants from People or Call log.
- Touch the icon to start a conference call.
- (I) Depending on your network operator.
- (2) Depending on your network operator. 35

- During a conference call, touch to drop a participant or to talk privately to one of the participants. Touch **End** to drop the participant from the conference, touch to talk privately to the participant and hold the other participants.
- Touch **End** to end the conference call and disconnect all callers.

3.1.6 Call settings

Touch and touch **Settings** from the Dial screen. The following options are available:

Voice call

Voicemail

Service

Open a dialog box where you can select your carrier's voicemail service or another service.

Voicemail settings

If you are using your carrier's voicemail service, it opens a dialog box where you can enter the phone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number — for example, to add a

password after the phone number.

Call forwarding

Touch to configure how your calls are forwarded when you are busy, unanswered or unreachable.

Additional settings

Caller ID

Opens a dialog box where you can set whether your phone number is displayed when making

calls

Call waiting

Mark the checkbox to notify you of a new

incoming call.

Call waiting status

Check the call waiting status of your phone.

Other settings

• Fixed Dialling Numbers(1)

Fixed Dialling Number (FDN) is a SIM service mode, where outgoing calls are restricted to a set of phone numbers. These numbers are added to the FDN list. The most common practical application of FDN is for parents to restrict the phone numbers which their children can dial.

For security reasons, you'll be prompted to enable FDN by entering SIM PIN2 which is usually acquired from your service provider or SIM maker.

Minute reminder

Mark the checkbox to enable minute reminder.

Vibrate reminder

Mark the checkbox to enable vibration when the call is connected.

• Turn over to mute

Mark the checkbox to mute incoming calls by turning the phone over.

• Power key ends call

Mark the checkbox to end a call by pressing the Power key.

• Dual mic noise reduction

Mark the checkbox to turn on dual mic for noise reduction.

Quick responses

Touch to edit quick responses which will be used when you reject a call with messages.

• International dialling assist

Mark the checkbox to activate.

3.2 Call log

You can access your call memory by touching from the Dial screen. Touch on the right side of the contact/number to place a call directly. There are three kinds of calls in Call log:



Outgoing calls

✓ Incoming calls

Touch icons on top of call logs to change among different kinds.

Touch a contact or number to view information or perform further operations.

You can view detailed information of a call, launch a new call or send messages to a contact or number, or add numbers to **People** (only available for unsaved phone numbers), etc.

Touch the icon to open the Quick Contact panel.

To clear the entire call memory, touch the **Menu** key and select **Delete**.

3.3 People.....



People enables quick and easy access to the contacts you want to reach.

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.

3.3.1 Consult your contacts



Touch the **Menu** key to display contacts list option menu.

The following actions are enabled:

• **Delete contact** Select and delete unwanted contacts.

• Contacts to display Choose contacts to display.

• Import/Export Import or export contacts between phone, SIM

card, and phone storage.

Accounts
 Manage the synchronization settings for different

accounts.

Settings Set contacts' display mode.

Share visible Share contacts with others by sending the contacts
 contacts vCard to them via Bluetooth, Email,

SMS,etc.

3.3.2 Managing contact groups

The contact group helps you to improve the organization of your contacts. You can add, remove and view groups in the **Contact group** screen.

Touch the icon to view local groups. To create a new group, touch the icon, enter the new name and touch **DONE** to confirm. If you have added accounts to your phone, touch the icon to view groups in accounts.

3.3.3 Adding a contact

Touch the Λ icon in the contact list to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.



If you want to add more information, touch **Add another field** to add a new category.

When finished, touch **DONE** to save.

To exit without saving, you cam touch = and touch Discard.

Add to/remove from Favorites

To add a contact to Favorites, you can touch a contact to view details then touch to add the contact to Favorites (the star will turn gold in color).

To remove a contact from favorites, touch the gold star 🛖 on contact details screen.



Only phone contacts can be added to Favorites.

3.3.4 Editing your contacts

To edit contact information, touch the **Menu** key on the contact details screen, then touch **Edit.** When finished, touch **DONE**.

Change a contact's default phone number

The default phone number (the number which has priority when making a call or sending a message) will always be displayed under the contact name.

To change the default phone number, touch and hold the number you want to set as the default number from the contact's details screen, then select **Set default**. A \checkmark appears after the number.

This choice is only available when the contact has more than one number.

Set the ringtone for a contact

On the contact's detail screen, touch the **Menu** key to display the list options menu, touch **Set ringtone**.

Delete a contact

To delete a contact, touch the **Menu** key and select **Delete** from the contact details screen.



The contact you have deleted will also be removed from other applications on the phone or web the next time you synchronize your phone.

3.3.5 Communicating with your contacts

From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, touch the contact to enter the detail screen, then touch the number.

To send a message to a contact, touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, then touch the contact to enter the detail screen, the contact to enter the contact to ent

Use Quick contact for Android

Touch a contact's picture to open Quick Contact for Android, then you can touch the number or the icon for the way you want to connect.



The icons available on the Quick Contact panel depend on the information you have for the contact and the applications and accounts on your phone.

3.3.6 Contacts importing, exporting and sharing

This phone enables you to import or export contacts between phone, SIM card, and phone storage, accounts, etc.

From the Contacts screen, touch to open the options menu, touch Import/export, then choose to import/export contacts from/to SIM card, Phone, SD card, Phone storage, Accounts, etc.

To import/export a single contact from/to SIM card, choose an account and target SIM card, select the contact you want to import/export, and touch the \checkmark icon to confirm.

To import/export all contacts from/to SIM card, choose an account and target SIM card, mark **Select all** and touch the \checkmark icon to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch a contact you want to share, touch and **Share** from the contact details screen, then select the application to perform this action.

3.3.7 Displaying contacts

You can configure which group of contacts, for each account you want to display in the contacts list. Touch the **Menu** key and select **Contacts to display** from the contacts list screen, then you can choose which contacts to display.

Touch the **Menu** key and select **Settings**, you can sort list by given name or family name, as well as view contact names as given/family name first.

3.3.8 Joining/Separating contacts(1)

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, touch the **Menu** key and select **Edit**, then touch the **Menu** key again and touch **Join**.

Then, you will be required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will no longer be displayed in the Contacts list.

To separate contact information, touch the contact whose information you want to separate, touch the **Menu** key and touch **Edit**, then touch the **Menu** key again and touch **Separate**, touch **OK** to confirm.

3.3.9 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

To add an account, drag down the notification panel and touch on to enter **Settings**, then touch **Add account**.

You are required to select the kind of account you are adding, like Google, Corporate, etc.

As with other account set-ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the phone. Open the **Settings** screen, touch the account you want to delete, touch the **Menu** key and select **Remove account**, then confirm.

Turn on/off the sync & Auto-sync

Touch an account to enter the account screen, mark/unmark the checkbox(s) to turn on/off the account's auto-sync. When activated, all changes to information on the phone or online will be automatically synchronized to each other.

Sync manually

You can also synchronize an account manually on the **Accounts** screen. Touch an account in the list, then touch the **Menu** key and select **Sync** now

Only applicable for phone contacts.

4 Messaging, Email.....

4.1 Messaging.....



You can create, edit and receive SMS and MMS with this mobile phone. To access this feature, touch reference from the Home screen.



All messages you receive or send out can be saved in the phone's memory or SIM card. To consult the SMS messages stored in the SIM card, touch from the Messaging screen, then touch Settings\Text message(SMS)\Manage SIM messages.

4.1.1 Writing a message

On the message list screen, touch the new message icon \bigcirc to write text/multimedia messages.







For saved contacts, touch the photo to open the **Quick Contact** panel to communicate with the contact. For unsaved contacts, touch the photo to add the number to your **People**.

Sending a text message

Enter the mobile phone number of the recipient on the **Type person's** name or number bar or touch to add recipients, touch the **Type** text message bar to enter the text of the message. When finished, touch to send the text message.

An SMS message of more than 160 characters will be charged as several SMS.A counter will appear upon the Send option of the text box to remind you how many characters are allowed to be entered in one message.



Specific (accented) letters will increase the size of the SMS, which may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

To send a multimedia message, enter the recipient's phone number in the **Type person's name or number** bar, touch the **Type text message** bar to enter the text of the message. Touch the **Menu** key to open the option menu, select **Add subject** to insert a subject, and touch to attach a picture, video, audio and so on.

When finished, touch $\stackrel{\text{\tiny MMS}}{\triangleright}$ to send the multimedia message.

Attachment options:

• Pictures Access the Gallery application or File manager to

select a picture as an attachment.

• Capture picture Access the Camera to capture a new picture for

attaching.

• Videos Access the Gallery application or File manager to

select a video as an attachment.

• Capture video Access the Camcorder to record a new video for

attaching.

Audio Access a selection of audio files for attaching.

• Record audio Enter the Sound Recorder to record a voice

message for attaching.

• Slideshow Enter the Edit slide show screen, touch Add


slide to create a new slide, and touch a currently existing slide to edit it (see following picture). Touch the **Menu** key to get more actions, like setting the slide duration, adding music, etc.

Contact Access People application to select one or

more contact(s) to attach.

• Calendar Access Calendar application to select one or

more event(s) to attach.

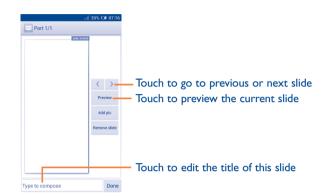

4.1.2 Manage messages

When receiving a message, a icon will appear on the status bar as notification. Drag down the status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter the message-composing screen, enter the text, then touch \triangleright .

Touch and hold an SMS in the message details screen. The following message options are available for selection:

55,7	Copy the current message content. You can paste it to the enter bar of the new message you are going to compose.
• Forward	Touch to forward the message to another recipient.
 Lock/Unlock message 	Touch to lock/unlock the message so it can't/can be deleted if you reach the maximum number of stored messages.
• Save message to SIM card	This option displays when the message is an SMS. Touch to save the message to the SIM card.
 View message details 	Touch to view details of the message.
• Delete message	Delete the current message.
• Select text	Touch to select the message text to copy, cut, add to dictionary, etc.

This option displays when the message is an SMS.

4.1.3 Adjust message settings

You can adjust a set of message settings. From Messaging application screen, touch the **Menu** key and select **Settings**.

Touch to choose SMS validity period.

Text message (SMS)

Validity period

Copy

Delivery reports	Select to request a delivery report for each text message you send.	message size	not be more than 1024MB.
• Edit quick text	Touch to add or edit message templates.	 Priority 	Touch to set the priority of N
• SMS storage	Touch to choose either phone or SIM card for	Notifications	
location	storing messages.	 Notifications 	Select to display message no
Manage SIM	Touch to manage messages stored on your SIM		bar.
messages	card.	• Mute	Touch to mute or select the
 SMS service 	Touch to check or edit service center number.		notification sound.
center		• Coloct vingtons	Touch to solvet a ringtone

Multimedia message (MMS)

Group messaging	Mark the checkbox to send a single message to multiple recipients.
 Delivery reports 	Select to request a delivery report for each

	multimedia message you send.					
 Read reports 	Select to request a report on whether ea	ach				

Read reports	Select to request a report on whether each
	recipient has read a multimedia message sent by
	you.

Send	read report	Select	to	request	a	report	on	whether	the
		multim	edia	message	has	been se	nt o	ut.	

Auto-retrieve	Select to	download	the	full M	1MS message
	(including	message	body	and	attachment)
	automatica	ally to y	our	phone.	Otherwise,
	download	only the MI	۹S me	ssage h	neader

	,
 Roaming auto- 	Select to download the full MMS message
retrieve	(including message body and attachment)
	automatically when roaming. Otherwise,
	download only the MMS message header to
	avoid extra charges.

• Creation mode	louch to select MMS creation mode.
• Maximum	Select to edit the message size limit, but it should
message size	not be more than 1024MB.

Priority	Touch to set the priority of MMS.

• Notifications	Select to	aispiay	message	notifications	ın	status
	bar.					

• Mute	Touch to mute or select the time interval of
	notification sound.

 Select ringtone 	Touch	to	select	a	ringtone	as	a	new	message
	notifica	tio	n tono						

General

Multimedia

ringtone

 Chat wallpaper Touch to select wallpaper for message background.

Message font size Touch to select message font size.

Delete old Select to delete old messages when the maximum messages number of stored messages is reached.

• Text message limit Touch to set the number of text messages to be

saved per conversation.

Touch to set the number of multimedia

message limit messages to be saved per conversation.

• Cell broadcast Touch to choose a SIM card and configure cell.

• Enable WAP
PUSH

Mark the checkbox to enable reception of WAP
PUSH.

Show email Mark the checkbox to include email address in address contact results.

E II CD MILE III CD II

• Enable CB Mark the checkbox to enable CB ringtone.

• Select CB Touch to select a ringtone for cell broadcast ringtone messages.

4.2 Gmail/Email

The first time you set up your phone, you can select to use an existing Gmail or to create a new Email account.

4.2.1 Gmail



As Google's web-based email service, Gmail is configured when you first set up your phone. Gmail on your phone can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email account, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels instead of folders.

To access Gmail

Gmail displays messages and conversations from one single Gmail account at a time, if you own more than one account, you can add a new one by selecting **Settings** from the Home screen, then touch **ADD ACCOUNT**. When finished, you can switch accounts by touching the account name from Inbox screen, and touch the account you want to view.

To create and send emails

- Touch the ____ icon from from the Inbox screen.
- Enter recipient(s)'s email address in from the To field, and if necessary, touch the Menu key and select Add Cc/Bcc to add a copy or a blind carbon copy to the message.
- Enter the subject and the content of the message.
- Touch the Menu key and select Attach picture/video to add an attachment.
- Finally, touch the icon to send.

• If you do not want to send the mail out right away, you can touch the **Menu** key and select **Save draft** or touch **Back** key to save a copy. To view the draft, touch the icon on the top left corner of the screen,

If you do not want to send or save the mail, you can touch the **Menu** key and then select **Discard**.

To add a signature to emails, touch the **Menu** key and select **Settings** from the inbox screen, choose an account, then touch **Signature**.

To receive and read your emails

then select **Drafts**.

When a new email arrives, you will be notified by a ringtone or vibration, and a icon will appear on the Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

You can search for an email by sender, receiver, subject, etc.

- Touch the Q icon from the Inbox screen.
- Enter the keyword you want to search for in the search box and touch in the soft keyboard.

To reply or forward emails

 Reply 	When	viewing	an	email,	touch	+	to	reply	the
	sender	of this n	nail.						

- Touch and select "Reply all" to send messages to all people in a mail loop.
- Forward

 Touch and select "Forward" to forward the received mail to other people.

Mark the checkbox to select email to activate batch mode, and generate the following options:

•	Touch to archive the email message. To	display the
_	archived messages, you can touch	🔰 in Inbox
	screen then touch All mail.	

- Touch to delete the email message.

 Touch to add or change the label of the email
- message or conversation.
- To assign a star or remove the star from the

Touch to mark an email message as read or unread.

- conversation.Mark as (not) To mark the email as important or not important.
- important
- Mute To mute the entire conversation. When muted, new mails related to this conversation will not be displayed in the Inbox, but archived.
- **Report spam** To report the email message/conversation as spam.
- Report phishing To report the email message/conversation as phishing.

Gmail settings

To manage Gmail settings, touch the Menu key and select Settings in the Inbox screen.

General settings

Auto-advance

Message actions

 Archive & delete actions 	Touch to select among different actions.
 Confirm before deleting 	Mark the checkbox to request confirmation before deleting emails.
 Confirm before archiving 	Mark the checkbox to request confirmation before archiving emails.
 Confirm before sending 	Mark the checkbox to request confirmation before sending emails.
• Swipe to archive	Mark the checkbox to archive mails.
• Sender image	Mark the checkbox to show the sender image beside the name in the conversation list.
• Reply all	Mark the checkbox to make this the default response to messages.
 Auto-fit messages 	Mark the checkbox to zoom in/out of the message, so that it fits on the screen.

After touching an account, the following settings will appear:

• Inbox type	To set this inbox as the default one or priority one.
 Notifications 	Select to activate notification when a new email arrives.
Inbox sound & vibrate	Touch to set Sound, Vibrate and Notify for every message.
• Signature	To add a signature text to the end of each mail you send.
Vacation responder	Touch to set up your vacation responder.
• Sync Gmail	Mark the checkbox to turn on/off Gmail sync.
 Days of mail to sync 	Touch to set the duration in days for mail sync.
Manage labels	Touch to open the Label screen, where you can manage synchronization and notifications.
 Download attachments 	Mark the checkbox to auto download attachments to recent messages via Wi-Fi.

4.2.2 Email.....



Besides your Gmail account, you can also set up external POP3, IMAP or IMAP email accounts in your phone.

To access this function, touch **Email** from the Home screen.

An email wizard will guide you through the steps to set up an email account.

• Enter the email address and password of the account you want to set up.

57

Touch to select which screen to show after

you delete or archive a conversation.

Touch to show/hide message actions.

- Touch Next. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Alternatively, you can touch Manual setup to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- To add another email account, you can touch Menu key and then Settings, and finally touch Add account on the right of the title to create the account.

To create and send emails

- Touch the icon from the Inbox screen.
- Enter recipient(s) email address(es) in the **To** field.
- If necessary, touch Menu key and touch Add Cc/Bcc to add a copy or a blind carbon copy to the message.
- Enter the subject and the content of the message.
- Touch Menu key _____, touch Attach file to add an attachment.
- Finally, touch > to send.
- If you do not want to send the mail right away, you can touch and save draft or touch the Back key to save a copy.

4.3 Google Hangouts.....



Google's instant messaging service, Google Hangouts, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch Application tab from the Home screen, then touch **Hangouts**. All friends added by using Google Hangouts from the web or phone will be displayed in your friends list.

4.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then enter your message and finally touch \(\big> \).

You can invite other friends to join in a group chat by touching **Menu** key and **New group Hangout** and then selecting the friend you want to add.

4.3.2 To add a new friend

From the Friends list, touch the Ω icon to add a new friend.

Enter the name, email, number or Circle of the friend you want to add, and if the friend is not yet on Hangouts, the system will require to send invite by telling the friend via SMS or Gmail. A notification with this invitation will be showed in your friend' messaging or Gmail.

If your friends invite you to do video talk or they send you message in the first time, you could select Decline or Reply in response by touching **Menu** key and Hangout requests.

4.3.3 To start and close a chat

Touch one friend from friends list, you could send messages to your friends or have a video call;

After you join Google^{+} you could send pictures to everyone in the google hangouts.

When you want to end a chat, touch back key from Chatting screen directly.

If you want to sign out, touch Menu key and Settings\Sign out.

4.3.4 To manage your friends

Besides adding new friends to your friends list, the following actions are available for your choice:

• To view all friends: By default, all your friends are displayed in Friends list. Touch your friend could start the conversation directly. Touch and hold the friend to activate archive and delete.

4.3.5 Settings

A series of settings are available for your selection by touching **Menu** key and **Settings** from the Friends list screen, and choose an account.

Profile photo	Touch to set or change your Google * profile photo.
 Notifications 	Mark the checkbox to turn on the notifications.
• Sound	Touch to set the hangouts message notification sound or Hangouts video call sound.

• **Vibrate** Mark the checkbox to active the vibrate.

• Customise new requests

Touch to enable that people in your circles can hangout with you or send you a request to Hangout.

• **Join Google**⁺ Touch to join Google+ to get more.

Phone number confirmed
 Touch to confirm phone number to help people find you and see your Google account name on Hangouts.

Blocked people Touch to view block people.
 Sign out Touch to remove your accounts.
 About Hangouts Touch to view Hangouts information.

5 Calendar & Time.....

5.I Calendar

29

Use the Calendar to keep track of important meetings, appointments, etc.

5.1.1 Multimode view

You can display the Calendar in weekly, monthly, yearly, or agenda view.

Touch **Month**, **Week Agenda** or the year label to change your Calendar view.



5.1.2 To create new events

You can add new events from any Calendar view.

- Touch the + icon to access the new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select **All day**.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. The guests will receive an invitation from Calendar and Email.
- When finished, touch **DONE** from the top of the screen.

To quickly create an event from the Week or Month view screen, touch and hold an empty spot or an event to open the Option menu, then touch **New event** to enter the event details screen of the time you have previously selected.

5.1.3 To delete or edit an event

To share, delete or edit an event, touch the event to enter the details screen, touch the icon to share the event with other people by Bluetooth, Email and messaging, etc., touch the icon to edit the event, and touch the icon to delete.

5.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon will appear on the Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open the notification panel, touch the event name to view the Calendar notification list.

Touch **Snooze** to turn off all event reminders for 5 minutes.

Touch the **Back** key to keep the reminders pending on the status bar and the notification panel.

Important options activated by touching the **Menu** key from the Calendar main screen:

Refresh To refresh the calendar.
 Search To search in the calendar.
 Calendars to display To show or hide calendars.

• Settings To make a series of Calendar settings.

Clear events To clear the selected events.
 Go to To jump to the date you set.

5.2 Time.....



Time application includes four applications – World clock, Alarm, Timer and Countdown.

Touch Alarm to add or set an alarm.

5.2.1 To set an alarm

From the **Time** screen, touch to enter the **Alarm** screen, touch to add a new alarm. The following options will appear:

• **Time** Touch to set time.

• Repeat Touch to select days when you want the alarm

to work

• Ringtone Touch to select a ringtone for the alarm

• Vibrate Select to activate vibration

Label Touch to set a name for the alarm

When finished, touch **OK** to confirm.

Touch and hold on a currently existing alarm and touch **Delete alarm** to delete the selected alarm.

5.2.2 To adjust alarm settings

Touch the Menu icon from the **Alarm** screen. The following options can now be adjusted:

Alarm in silent mode

Select to play alarm with sound or vibration even when the phone is in Silent mode.

Snooze durationVolume buttons

Touch to set temporary turn off time of an alarm. Touch to set side **Volume up/down** key

behaviors when alarm sounds: None, Snooze

or **Dismiss**.

 Turn over to activate Touch to choose the status **Snooze** or **Dismiss**. Touch the switch to turn on/ off snoozing or to dismiss the alarm by turning over the phone.

6 Getting connected.....

To connect to the internet with this phone, you can use EDGE/H/H⁺ networks or Wi-Fi, whichever is most convenient.

6.1 Connecting to the Internet

6.1.1 GSM/EDGE/3G

To check the network connection you are using, touch Settings\More...\
Mobile networks\Access Point Names or Network operators.

To create a new access point

A new EDGE/H/H $^+$ network connection can be added to your phone with the following steps:

- Drag down notification panel and touch to access **Settings**.
- Touch More...\Mobile networks\Access Point Names.
- Touch Menu key and select New APN.
- Enter the required APN information.
- When finished, touch the Menu key and select Save.

6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Touch on the Quick setting panel to get to Settings.
- Touch the switch beside Wi-Fi to turn on/off Wi-Fi.
- Touch Wi-Fi, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect with. If the network you selected is secured, you are required to enter a password or other credentials (contact your network operator for details). When finished, touch Connect.

To activate notification when a new network is detected

When Wi-Fi is on and the network notification is activated, the Wi-Fi icon will appear on the status bar whenever the phone detects an available wireless network within range. The following steps activate the notification function when Wi-Fi is on:

- Drag down notification panel and touch to access Settings.
- Touch Wi-Fi. Then touch the Menu key and select Advanced from Wi-Fi screen.
- Mark/Unmark the Network notification checkbox to activate/ deactivate this function.

To add a Wi-Fi network

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Drag down notification panel and touch to access Settings.
- Touch **Wi-Fi**, and then touch + .
- Enter the name of the network and any required network information.
- Touch Save.

When successfully connected, your phone will be connected automatically the next time you are within range of this network.

To forget a Wi-Fi network

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi screen, touch and hold the name of the saved network.
- Touch Forget network in the dialog that opens.

6.2 Browser.....



Using the Browser, you can enjoy surfing the Web.

To access this function, touch the Browser icon 3 on the Home screen.

To go to a web page

On the Browser screen, touch the URL box at the top and enter the address of the web page, then touch go to confirm.



The URL bar will hide after a few seconds. To show the URL bar, you can touch and slide down the screen.

To set a homepage

- Touch the **Menu** key from the Browser screen to display the option menu, touch **Settings\General\Set homepage**.
- Choose a page or most visited website as your homepage.
- If you choose Other, enter the URL of the website you want to set as your homepage, touch OK to confirm.

6.2.1 Viewing web pages

After opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

To zoom in/out of a web page

Pinch/Spread your finger on the screen to zoom out/in of the web page.

To quickly zoom into a section of a web page, double-tap on the section you want to view. To return to normal zoom level, double-tap again.

To find text on a web page

- Touch the Menu key from the web page screen, then select Find on page.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches will be boxed.
- Touch the up or down arrow to switch to the previous or next matching items.
- When finished, you can touch or the Back key to close the search bar.

Further operations for the text on a web page

You can copy, share or search the text on a web page:

- Touch and hold the text to highlight the text.
- Move the two tabs to select the text.
- Touch SELECT ALL to select all words in this web page.
- Touch in to copy the selected text.
- Touch to show further actions, including find, share and search on the page or the web.
- When finished, touch \checkmark or the **Back** key to deactivate the mode.

To open new window/switch between windows

Multiple windows can be opened at the same time for your convenience.

- Touch 🛃 to open all windows' thumbnails.
- Slide up and down to view all windows, touch one to view it.
- Touch
 — to open a new window.
- Touch the Menu key and select New incognito tab to open a window without any trace.
- To close a window, touch on the window you want to close or slide it sideways.

Other options:

- **Refresh** To refresh the current page.
- Share page To share the current page with your friends via various
 - ways, like Messaging, Email, Bluetooth, etc.
- Request desktop site
- Save for To save the web page for offline reading. You can find it by offline reading touching the Menu key and then selecting Bookmarks\
 History\SAVED PAGES.

To enable/disable computer versions of websites.

- Close To close all tabs and exit.
- Home page To get back to the home page you set.
- Save to To add the current website page as a bookmark.
- bookmarks
- Find on page To input contents you want to find on the current
 - page.
- **Stop** To stop opening the current page.
- Bookmarks/ To see your bookmarks, browsing history and saved
 - **History** pages
- **Version** To see the version of your browser.



Touch the icon on the left of the URL, you can view more information about the current page.

6.2.2 Manage links, history and downloads

To manage a link, phone number or address displayed on a web page

• **Link** Touch the link to open the web page.

Touch and hold the link to open options for further operation, like opening in new window, saving link,

copying link URL, etc.

• Phone number Touch to call the phone number.

• Address Touch to open Google Maps and locate the address.

To view Browser history

- Touch the **Menu** key from the Browser screen.
- Touch Bookmarks\History.
- Touch the **History** tab to view browser history.
- Touch Saved pages to view the pages you've saved.

To download a web application/view your downloads

Before downloading a web application, you need to enable your phone to install web applications (touch the **Menu** key from the Home screen, touch **Settings\Security**, mark the checkbox of **Unknown sources**, finally touch **OK** to confirm).

To download an item, touch the item or the link you want to download.

To cancel a download, touch the downloaded item from the Notification panel, select the item to be cancelled, and touch $\frac{1}{2}$ to confirm.

To view items you have downloaded, touch the application **Downloads**.

Manage bookmarks

To bookmark a web page

- · Open the web page you want to bookmark.
- Touch the Menu key and select Save to bookmarks, or from the History screen, touch the star beside the URL.
- Enter the name and the location if needed and touch **OK** to confirm.

To open a bookmark

- Touch the **Menu** key and select **Bookmarks\History**, or touch the icon to enter the **Bookmarks** screen.
- Touch the bookmark you want to open.
- You can also touch and hold to display the options screen, then touch Open or Open in new window.

To edit a bookmark

- Touch the **Menu** key and select **Bookmarks\History**, or touch the icon to enter the **Bookmarks** screen.
- Touch and hold the bookmark you want to edit.
- Touch Edit bookmark, and input your changes.
- When finished, touch **OK** to confirm.

Touch and hold a bookmark in the bookmark list to view these additional options:

 Add shortcut to Home

Copy link URL

To add a bookmark shortcut to the Home screen.

Home screeShare link To sh

To share the bookmark.

To copy the bookmark link.

To delete the bookmark.

Delete bookmarkSet as homepage

To set this page as the homepage.

6.2.3 Settings

A series of settings are available for your adjustment. To access the Browser settings, touch the **Menu** key from the Browser screen, and select **Settings**.

General

 Set homepage 	Touch to set your homepage.
Privacy & security	
• Clear cache	Touch to clear locally cached content and databases.
 Clear history 	Touch to clear the browser history.
• Show security warnings	Mark the checkbox to show a warning if there is a problem with a site's security.
 Accept cookies 	Mark to allow sites to save and read cookie data.

Clear all cookie data

Remember form data

Mark the checkbox to remember data in forms for later use.

· Clear form data

Touch to clear all saved form data.

Touch to clear all browser cookies.

• **Enable location** Mark the checkbox to allow sites to request access to your location.

Clear location access

Touch to clear location access for all websites.

Accessibility

• **Text scaling** Slide to change the size of the text display.

• Minimum font size Slide to change the minimum font size.

Advanced

• Set search engine Touch to select a search engine.

 Open in background Mark the checkbox to open new windows behind the current one.

• Enable JavaScript

Mark the checkbox to enable JavaScript.

 Allow multiple tabs per app Mark the checkbox to allow one application to use multiple tabs.

• Enable plug-ins

Mark the checkbox to enable plug-ins.

Website settings

Touch to view advanced settings for individual websites.

 Open pages in overview Mark the checkbox to open web pages zoomed out, in an overview.

Auto-fit pages

Mark the checkbox to format web pages to fit the screen.

 Block pop-up windows Mark the checkbox to prevent pop-up windows.

• Text encoding

Touch to select the character-encoding standard.

• Reset to default

Touch to clear all browser data and to reset all

settings to default.

Bandwidth management

 Search result preloading Touch to enable/disable browser to preload search results in the background.

 Web page preloading

Touch to enable/disable browser to preload the linked web pages in the background.

Load images Mark the checkbox to display images on web

pages.

Labs

Quick controls
 Ma

Mark the checkbox to enable quick controls and hide app and URL bars.

• Full screen

Mark the checkbox to use the full screen mode

to hide the status bar.

6.3 Connecting to Bluetooth devices(1)

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this function, drag down notification panel and touch of to access **Settings**. Then touch **Bluetooth**. Your device and other available ones will display on the screen.

To turn on Bluetooth

- Drag down notification panel and touch to access Settings.
- Touch ____ to activate/deactivate this function.

(1) You are recommended to use ALCATEL ONE TOUCH Bluetooth headsets, which have been tested and proved compatible with your phone. You can go to www.alcatelonetouch.com for more information about the ALCATEL ONE TOUCH Bluetooth headset. To make your phone more recognizable, you can change your phone name which is visible to others.

- Drag down notification panel and touch to access Settings.
- Touch Bluetooth.
- Touch the Menu key and select Rename phone.
- Enter a name, and touch Rename to confirm.

To make device visible

- Drag down notification panel and touch 🔯 to access **Settings**.
- Touch **Bluetooth**.
- Touch your device to make it visible or invisible.
- Touch the **Menu** key and select **Visibility timeout** to select the visible time

To pair/connect your phone with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your phone with the Bluetooth device with which you want to exchange data.

- Drag down notification panel and touch oto access Settings.
- Touch Bluetooth.
- Touch SEARCH FOR DEVICES.
- Touch a Bluetooth device you want to be paired with in the list.
- A dialog will popup, touch **Pair** to confirm.
- If the pairing is successful, your phone will connect with the device.

To disconnect/unpair from a Bluetooth device

- Touch the Settings icon beside the device you want to unpair.
- Touch Unpair to confirm.

6.4 Connecting to a computer

With the USB cable, you can transfer media files and other files between internal storage and a computer.

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- If you use mass storage, open the Notification panel and touch USB connected, then touch Mount in the dialog that opens to confirm that you want to transfer files.
- If you use MTP or PTP, your phone will be automatically connected.



For Windows XP or lower operating systems, you should download and install Windows Media Player I I on your computer from the following link: http://windows.microsoft.com/en-gb/windows/windows-media-player.

To locate the data you have transferred or downloaded to the internal storage, touch **File Manager**, all data you have downloaded is stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications on your phone, etc.

6.5 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable insert space(USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.



The functions below may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

To share your phone's data connection via USB

Use the USB cable that came along with your phone to connect the phone to a USB port on your computer.

- Drag down notification panel and touch to access Settings.
- Touch More...\Tethering & portable hotspot.
- Mark\unmark the checkbox of USB tethering to activate/deactivate this function.

To share your phone's data connection via Bluetooth

- Turn on your phone with a SIM card inserted and connect another phone by Bluetooth.
- Drag down notification panel and touch **DATA CONNECTION**.
- Drag down notification panel and touch to access Settings.
- Touch More...\Tethering & portable hotspot.
- Mark\unmark the checkbox of Bluetooth tethering to activate/ deactivate this function.

To share your phone's data connection as a portable Wi-Fi hotspot

- Drag down notification panel and touch to access Settings.
- Touch More...\Tethering & portable hotspot.
- Touch the switch beside **Wi-Fi hotspot** to activate/deactivate this function.

To rename or secure your portable hotspot

When Portable Wi-Fi hotspot is activated, you can change the name of your phone's Wi-Fi network (SSID) and secure its Wi-Fi network.

- Drag down notification panel and touch to access Settings.
- Touch More...\Tethering & portable hotspot\Wi-Fi hotspot.
- Touch Set up Wi-Fi hotspot to change the network SSID or set your network security.
- Touch Save.

6.6 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

To add a VPN

- Drag down notification panel and touch to access Settings.
- Touch More...\VPN settings and then touch \(\psi\).
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Touch Save.

The VPN is added to the list on the VPN settings screen.



Before adding a VPN, you should set a lock screen pattern, PIN code or password for your phone.

To connect/disconnect to a VPN

To connect to a VPN:

- Drag down notification panel and touch 🔯 to access **Settings**.
- Touch More...\VPN settings.
- VPNs you have added are listed; touch the VPN you want to connect with.
- In the dialog that opens, enter any requested credentials and touch Connect.

To disconnect:

 Open the Notification panel and touch the resulting notification for the VPN disconnection.

To edit/delete a VPN

To edit a VPN:

- Drag down notification panel and touch to access Settings.
- Touch More...\VPN settings.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch Edit profile.
- After finishing, touch Save.

To delete:

 Touch and hold the VPN you want to delete, in the dialog that opens, touch Delete profile.

7 Google Play Store(1)......

Google Play Store is an online software store, where you can download and install applications and games to your Android powered phone.

To open Google Play Store:


- Touch Play Store from extended screen.
- For the first time you access Google Play Store, a screen with terms of service pops up for your attention, touch **Accept** to continue.

Touch the **Menu** key, then select **Help** to enter the Google Play Store help page for more information on this function.

7.I Locate the item you want to download and install

Google Play Store home page provides several ways to find applications. It show applications and games in categorized listings.

Touch the **Menu** key and select **My apps** to see all your downloads.

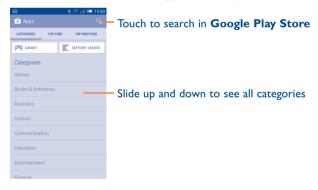

81

(1) Depending on your country and operator.

Touch a category on Google Play Store screen to browse its contents. You can also select a subcategory if there is one. Within each category you can select to view items sorted by Top free, Top new free, Trending, etc

Touch the Google Play Store icon on the top left of the screen or touch **Back** key to return to the previous screen.

7.2 Download and install

To download and install:

- Navigate to the item you want to download, and enter the details screen from which you can read its description, overall rating or comments, view developer's information, etc.
- Touch Install to preview the functions and data the application can access on your phone if you install it.
- Touch Accept.
- The progress of the download will show on the details screen, touch to stop downloading the item. You can also access this screen through Notification panel.
- After download and installation have finished, you will see a notification on the status bar.



Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you accept, you are responsible for the results of using this item on your phone.

To open the application you have downloaded:

- On the Google Play Store screen, touch the Menu key and select My apps.
- Touch the installed application in the list, then touch **Open**.

To buy an application(1)

On **Google Play Store**, some applications are labelled as free, while some of them are to be paid for before downloading and installing.

- Touch the application you want to buy.
- Touch the price on the up-right of the screen to preview the functions and data the application can access on your phone if you install it.
- Touch Continue to confirm.
- When making your first purchase, you are required to input your credit card information and to log into the Google payment and billing service.
- If your account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, touch **Back** key.
- Mark the checkbox if you agree with the terms of service.
- · Touch Buy now at the bottom of the screen.

When finished, Android downloads the application.

To request a refund

If you are not satisfied with the application, you can ask for a refund within 15 minutes of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Touch the Menu key and select My apps from the Google Play Store screen.
- Touch the application that you want to uninstall and receive a refund for.
- Touch **Refund** to uninstall the application and receive a refund. If the button becomes **Uninstall**, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch OK.

7.3 Manage your downloads

After you have downloaded and installed an application, the following further operations are available for your selection.

View

On the Google Play Store screen, touch the **Menu** key and select **My** apps.

Uninstall

On the Google Play Store screen, touch the **Menu** key and select **My apps**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

Google Paid applications may not be available to users in some countries.

83

Refund

On the Google Play Store screen, touch the **Menu** key and select **My apps**. Touch the application you want to uninstall for a refund, touch **Refund**, and finally touch **OK** to confirm.

Update notification

On the Google Play Store screen, touch the **Menu** key and select **My apps**. Touch the **Menu** key and select **Settings\Notifications** to enable update notification.

Auto update

To auto update all installed applications, touch the **Menu** key and select **My apps** from the Google Play Store screen. Touch the **Menu** key and select **Settings\Auto-update apps** to enable this function.

To auto update one specific application, mark the checkbox of **Allow** automatic updating from the details screen,

Rate and review

Open the details screen for an application, touch the stars under **RATE & REVIEW** to award and input comments, touch **OK** to confirm.

Flag

You can report an inappropriate application to Google Play Store by flagging it. Open the details screen for the application, scroll to the bottom and touch **Flag as inappropriate**, enter the reason and finally touch **Submit**.

85


8 Multimedia applications

8.I Camera.....



Your mobile phone is fitted with a Camera for taking photos and shooting videos.

Before using the Camera, please be sure to open the protective lens cover to avoid it affecting your picture quality.

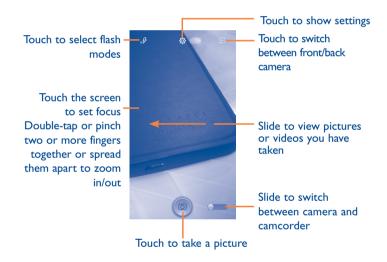

To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, touch the screen to focus if necessary, touch the icon, touch and hold viewfinder or volume key to take the picture which will then be automatically saved.

To shoot a video

First position the object or landscape in the viewfinder, and touch the icon to start recording. Touch II to pause recording, touch or press the **Back** key to save the video.

8.1.1 Settings in framing mode

Before taking a photo/shooting a video, touch the icon to adjust a number of settings in framing mode.

Back camera shooting mode

Touch the **Menu** key to access camera settings and below options will display for you to choose from:

 Full screen 	Touch to turn on/off full screen preview mode.

 Night 	Touch to turn on/off night mode.
• Sports	Touch to turn on/off sports made

Advanced Touch to set picture size, timer, ISO, exposure

or turn on/off GPS locatin info.

• **Shutter sound** Touch to turn on/off shutter sound.

• HDR

Touch to turn on HDR (high-dynamic range). function. HDR photos can better reflect the visual effects people have in the real environment by synthesizing images under different exposure time. The phone will then automatically save the original photos and HDR ones.

• Panorama

Touch to turn on panorama function. Press the **Shutter** button or the **Volume** key to start taking panoramic photo and move the phone towards your capture direction and overlap the two lines. Once the nine slots below the screen are filled, the phone will automatically

save the photo.

Front camera shooting mode

Switch to front camera, touch the **Menu** key to access camera settings and the following options will display for your choice:

• Face beauty Touch to turn on/off face beauty function.

• Expression (4-shot) Touch to turn on expression (4-shot) function:

once four photos taken, the phone will automatically synthesize and save them as

one picture.


• Filter Touch to choose between different filter

modes.

8.2 Gallery



The Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice.

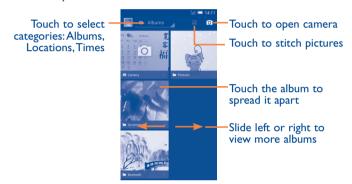

To view a picture/play a video

Pictures and videos are displayed by albums in the Gallery.

- Touch an album and all pictures or videos will spread the screen.
- Touch the picture/video directly to view or play it.
- Slide left/right to view previous or next pictures/videos.

Working with pictures

You can work with pictures by editing them, sharing them with friends, setting them as a contact photo or wallpaper, etc.

Touch from the full-screen picture view. More options will display for you to choose from.



- 1 Touch to go back to the picture display screen.
- 2 Touch to undo the previous modification.
- 1 Touch to redo the previous modification.
- 4 Touch to save the modified picture.

Batch operation

The Gallery provides a multi-select function, so that you can work with pictures/videos in batches.

Open the main Gallery window or an album, touch the **Menu** key and select **Select album** or **Select item** to activate batch operation mode (you can also touch and hold one album/picture), then touch albums/pictures you want to work on. Touch the circon to delete selected ones. Touch to share selected ones.

8.3 YouTube




YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.



As an online video service, your phone must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most Popular, Most Discussed, Featured Videos, etc.

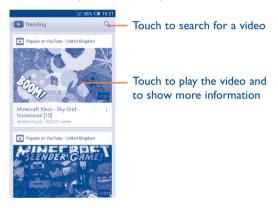

By touching the **Menu** key from the YouTube screen, you can set General settings and Search settings for YouTube.For details about these features, please visit the YouTube website: www.YouTube.com

8.3.1 Watch videos

Touch a video to play it. In the Playing screen, you can view information and video comments, and also browse links to related videos. You can also rate, share, label as favorite, create a new playlist, etc. from this screen.

To exit the video playing screen, touch **Back** key to return to the video list.

8.4 Music



Using this menu, you can play music files stored on the phone storage. Music files can be downloaded from a computer to phone using a USB cable

You will find four categories in which all songs are classified: **Favorite**, **Folder**, **Artist**, **Album**, etc.

8.4.1 Playing music

Touch a song to play it.



- Touch to play the current playlist in shuffle mode (tracks are played in random order).
- 2 Touch to skip to the previous track in the album, playlist, or shuffle.
- 6 Touch to pause/resume playback.
- Touch to skip to the next track in the album, playlist, or shuffle.
- 5 Touch to select repeat mode: Repeating all songs, Repeating current song, or Repeat is off.
- 6 Touch to enable Hi-Fi mode when headset is plugged in.
- Switch to the left to display lyrics (if available).
- 8 Touch to show the displayed song.
- Touch to add this song into your favorite.



Adjust sound effects

Touch the **Menu** key and select **Sound effects** from the playing screen to enable and adjust sound effects.

8.4.2 Working with playlists

Playlists allow you to conveniently organize all songs stored in the phone storage.

You can create a new playlist, add a song to the list, and delete or rename a playlist.

To create a playlist

Touch **Recently added** from the Playlists screen, touch the **Menu** key and then select **Save as playlist**, enter the name and finally touch **Save**.

To delete a playlist

Touch and hold a playlist to show the menu, then touch **Delete**.

To rename a playlist

Touch and hold a playlist to show the menu, then touch **Rename**. When finished, touch **Save** to confirm.

8.5 Video Player



Video player is a small built-in video player that lists all your videos.

Touch an item from the list to play. While playing, use Pause, Forward and Back functional icons as required, touch a point on the timeline to jump to and play from.

Google Maps......



9.1 Get My Location

9.1.1 Choose a data source to decide My Location

Drag down notification panel and touch to access **Settings**, touch **Location**.

Turn on **Location** and choose mode for **High accuracy**, **Battery saving** or **Device only**.

9.1.2 Open Google Maps and view My Location

Touch Maps from the Home screen.

Touch the icon on the map to view My Location.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.



To move the map, drag the map with your finger.

To zoom in and out of a map, pinch or spread your fingers, or you can also zoom in by double-tapping a location on screen.

To clear your map history, touch the \exists icon and then **Settings**, select **Maps history**, then touch the \boxtimes icon.

9.2 Search for a location

While viewing a map, touch the search icon o activate the search function.

In the search box, enter an address, a city or a local business.

Touch the search icon to search, and in a while your search results will appear on the map as red dots. You can touch one to show a label.



9.3 Star a location

Just like bookmarking a web address on the Internet, you can star any position on the map for later use.

9.3.1 How to star (or unstar) a location

Touch a location on a map

Touch the address rectangle which then opens

Touch the gray star at the top of the screen to star the location. (Or touch a gold star to unstar that location.)



9.3.2 View a list of starred items

Touch Map at the upper-left corner, and touch My Places.

The list of your starred items and their addresses opens.


Touch a location in the list to view it .

Touch the Menu key and select Refresh to update the list.

9.4 Get driving, public transportation or walking directions

9.4.1 Get suggested routes for your trip

Touch the Y icon from the Maps screen.



- Touch the enter bar or the triangle to edit your start point by one of the following methods: entering an address, using My Location, selecting a start point on a map, selecting a starred item, selecting an address from your contacts or using search history.
- Do the same for your end point.
- To reverse directions, touch the 11 icon.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.

To get reverse directions for a route you've already made, simply open that route's directions window and touch the 11 icon. There is no need to enter your start point and end point again.

9.4.2 Preview suggested routes and decide on a route more preferable or feasible to you

You can preview each turn in your route in Navigation, Satellite, and other views.

- Touch a left or right arrow to preview the next or previous leg of your route.
- You can view turn-by-turn directions, estimated distance and possible arrival time in a list by touching DIRECTIONS LIST, touch Back key or MAP VIEW to return to the previous view.

When selecting a more preferable or feasible route, distance and time will be the two most important factors for your evaluation. Distance and estimated time will be displayed at the top of the directions screen.

9.4.3 Search for locations along your route

Please refer to "9.2 Search for a location" for detailed information.

9.5 Arrangement of Layers

Layers allow you to view locations and additional information overlaid on the map. You can add multiple layers or remove only certain layers so you control exactly what information you want visible on the map at one time.

9.5.1 To view multiple layers

Touch the icon from the Maps screen. All available layers are listed (like Traffic, Satellite, etc), select one to view it.

9.5.2 To clear the map

After you get directions or search on a map, you can clear the markers/layers that have been drawn: touch the jicon and then **Settings**, select **Maps history**, then touch the icon.

Others.....

10.1 Calculator.....



With Calculator, you can solve many mathematical problems.

To access this function, touch Calculator from the application list.

There are two panels available: Basic panel and Scientific panel.

- · Place the phone horizontally and advanced panel will display.
- · Place the phone vertically and basic panel will display.





Enter a number and the arithmetic operation to be performed, enter the second number, then touch "=" to display the result. Touch \bigcirc to delete digits one by one, touch and hold \bigcirc to delete all at one time.

When some numbers or operations have been entered, touch and hold the entering bar to open a menu offering these further operations:

Cut To cut selected textCopy To copy selected text

Paste⁽¹⁾
 To paste what you have previously copied to the

entering bar

10.2 File Manager.....



To access this function, touch File Manager from the Home screen.

File Manager displays all data stored on internal storage, including applications, media files such as videos, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from a PC to your phone storage, you can locate the application on File Manager, then touch it to install it in your phone.

File Manager allows you to perform and be really efficient with the following common operations: create a (sub) folder, open a folder/file, view, rename, move, copy, delete, play, share, etc.

10.3 Sound Recorder



To access this function, touch **Tools\Sound Recorder** from the Home screen.

Sound Recorder allows you to record voice/sound for seconds/hours.

10.4 Radio




Your phone is equipped with a radio⁽¹⁾. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer a visual radio service.

To access this function, touch Radio from the Home screen.

ත්-

To use it, you must plug in your headset, which works as an antenna connected with your phone.

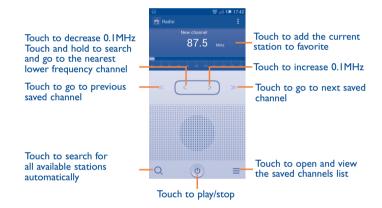

Option will not appear unless copy or cut operation has been made.

101

(1) The quality of the radio depends on the coverage of the radio station in that particular area.

Available options:

• Save channel Save the current tuned station to the channels

list.

• Audio mode Listen to the radio using the speaker or

earphone.

• Exit Turn off the radio.

• Enter frequency Enter the frequency manually.

• **Delete** Delete the channel

• RDS settings Touch to select channel information and

alternative frequency.

• **Record FM** Record video voice of the current channel.

10.5 Flashlight.....



To access this function, touch **Flashlight** from the Home screen.

Flashlight is an application which can provide power light for your convenience and you can select to turn on/off or adjust the brightness as needed.

10.6 Setup Wizard



To access this function, touch **Setup Wizard** from the application list.

Setup Wizard helps set up your phone in multiple ways: language, input method, mobile data connection, account setup and synchronization, system update, etc. This will also be performed the first time you power on your phone.

10.7 Other applications⁽¹⁾.....

The previous applications in this section are preinstalled on your phone. You can also download thousands of 3rd party applications by going to Google Play Store on your phone.

(1) Application availability depends on country and operator.





Drag down notification panel and touch to access **Settings**.

II.I Wireless & networks

II.I.I Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in range of a wireless network. The only thing you have to do is to enter the **Wi-Fi** screen and configure an access point to connect your phone to the wireless network.

For detailed instructions on using Wi-Fi, please refer to "6.1.2 Wi-Fi".

II.I.2 Bluetooth

Bluetooth allows your phone to exchange data (videos, images, music, etc.) within a small range with another Bluetooth supported device (phone, computer, printer, headset, car kit, etc.).

For more information on Bluetooth, please refer to "6.3 Connecting to Bluetooth devices".

II.I.3 Data usage

To enable/disable mobile data, touch the switch.

Touch the **Menu** key, and you can view more settings related to your data usage.



Data usage is measured by your phone, and your carrier may count differently. Please consider using a conservative limit.

II.I.4 VPN settings

A mobile virtual private network (mobile VPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. Mobile VPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspends-and-resumes their device to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information on VPN, please refer to "6.6 Connecting to virtual private networks".

11.1.5 Tethering & portable hotspot

This function allows you to share your phone's mobile data connection via USB or as a portable Wi-Fi access point (Please refer to "6.5 Sharing your phone's mobile data connection").

II.I.6 Mobile networks

• Data connection

Touch to turn on/off data connection.

Preferences

Touch to view/edit/delete preferences.

Access Point Names

You can select your preferred network with this menu.

Network operators

You can select a network operator.

11.2 Device

II.2.I Gestures

Mark the checkbox to enable the following gestures: Turn over to mute, Turn over to activate, Shake to switch music.

11.2.2 Sound

Use the Sound settings to configure volume and ringtones for different events and environments.

Hi-Fi

To enable the Hi-Fi effect, touch the switch.

Valuma

Volume settings can make user adjust the volume of ringtone, notifications, music, video and alarms, etc., or directly set the incoming calls to vibration or silence.

• Phone vibrate Marking the checkbox makes your phone vibrate

when receiving incoming calls.

• Silent mode Marking the checkbox silences phone for

incoming calls.

Ringtone & Notifications

Phone ringtone Touch to set your default phone ringtone.
 Crescendo Mark the checkbox to activate crescendo

ringtone ringtone.

• Notification sound Touch to set your default notification sound.

107

System

• Dial pad touch Mark the checkbox to enable tones when using tones the dial pad.

• Audible selection Mark the checkbox to enable sounds when

making screen selections.

• Screen lock sound Mark the checkbox to enable sounds to play

when locking and unlocking the screen.

• Haptic feedback Mark the checkbox to activate vibration when

pressing soft keys and with certain UI interactions.

• Power on ringtone Set your default power on ringtone.

• Power off ringtone Set your default shut down ringtone.

II.2.3 Display

• Clear Motion™ Mark the checkbox to enable the fluency enhancer when playing videos.

 Lock screen style Mark the checkbox to show notifications on the lock screen.

• Button LED

Mark the checkbox to enable button LED effect when touching the screen.

Automatic brightness Touch to adjust the brightness of the screen.

• Daydream

Touch to adjust the screen module.

Wallpaper

Touch to set the wallpaper.

Orientation

Touch to select whether rotate screen automatically

or not

• **Sleep** Touch to set the screen timeout.

Font size

Touch to set the font size.

• TV Link

Touch to turn on/off TV link function.

Color configuration

Touch to adjust the color temperature and saturation.

11.2.4 Lock settings

Select screen lock

• Slide Touch to enable slide unlock mode.

• Pattern Touch to unlock your phone's screen by drawing

a pattern.

• PIN Touch to unlock your phone's screen with a

numeric PIN.

• Password Touch to unlock your phone's screen with a

password.

• Face unlock Touch to unlock your phone's screen by looking

at it

• Voice unlock Touch to unlock your phone's screen by speaking

to it.

• None Touch to disable screen unlock security.

Lock options

You may select message and components to be displayed on lock screen.

Change lock wallpaper

Touch to select lock wallpaper from Lockscreen wallpapers or Gallery.

Owner information

Touch to show owner info on lock screen.

11.2.5 Status bar

Touch the oswitch to show all notifications of 3rd party application on the left top of the status bar.

II.2.6 Storage

Use these settings to manage your phone storage by monitoring the total and available space on your phone.



If a warning message comes up saying that phone memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files, etc.

11.2.7 Battery management

In the battery management screen you can view battery usage data since you last connected the phone to a power source. The screen also shows your battery status and how long it has been used since last charging. Touch one category to reveal its specific power consumption.

You can adjust power use by adjusting screen brightness or screen timeout in the Display screen.

You can also set your phone to saving mode or ultimate saver mode and in the latter mode, only four functions can be used including **Phone**, **People**, **Messaging** and **Calendar**.

II.2.8 Applications

You use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and emails.

11.3 Personal

11.3.1 Location

Mode

Touch to choose mode for **High accuracy**, **Battery saving** or **Device** only.

II.3.2 Security

Find Me Back

Turn on the switch to activate this function. It will protect your privacy in case of theft or loss.

Encrypt phone

You can encrypt your accounts, settings, downloaded apps and their data, media and other files by touching Encrypt phone.

Set up SIM card lock

Choose a SIM card you want to configure.

Mark the checkbox of **Lock SIM** card to lock the SIM card with a PIN code.

Touch Change SIM PIN to change the PIN code.

Make passwords visible

Mark the checkbox to show passwords as you type.

Device administrators

Touch to view or deactivate device administrators.

Unknown sources

Mark the checkbox to permit installation of applications that you obtain from websites, emails, or other locations other than Google Play Store.

To protect your phone and personal data, download applications only from trusted sources, such as Google Play Store.

Verify apps

Mark the checkbox to prevent or warn you before installing apps which might cause harm.

Trusted credentials

Touch to display trusted CA certificates.

Install from Memory

Touch to install encrypted certificates from the phone storage or MicroSD card.

Clear credentials

Touch to remove all credentials.

11.3.3 Language & input

Use the Language & input settings to select the language for the text on your phone and for configuring the onscreen keyboard. You can also configure voice input settings and the pointer speed.

Language

Touch to select the language and the region you want.

Spell checker

Mark the checkbox to enable the system to show suggested words.

113

User dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Touch the add button (+) to add a word.

Default

Touch to select a default input method. Touch **Configure input methods** to show all input methods. Touch the settings icon to configure a certain input method.

Android keyboard

The Android keyboard settings apply to the onscreen keyboard that is included with your phone. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

Input languages

Touch to set input language.

Auto-capitalization

Mark the checkbox to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

Vibrate on keypress

Mark the checkbox to have the phone vibrate briefly each time you touch a key on the onscreen keyboard.

Sound on keypress

Mark the checkbox to play a brief sound each time you touch a key on the onscreen keyboard.

Popup on keypress

Mark the checkbox to popup the key that you touched.

Voice input key

Touch to select location to display voice input key.

Auto correction

Touch to turn on/off auto correction, or you can also adjust the sensitivity of correction.

Show correction suggestions

Touch to show or not the correction suggestions while typing.

Next word suggestions

Mark the checkbox to popup word prediction.

Advanced settings

Touch to view more advanced settings for android keyboard, such as **Key popup dismiss delay**, **Suggest Contact name**, and etc.

Voice search

Touch to view settings about voice search, such as Language, Speech output, etc.

Text-to-speech output

Preferred engine

Touch to choose a preferred text-to-speech engine, touch the settings icon to show more choices for each engine.

• Speech rate

Touch to open a dialog where you can select how quickly you want the synthesizer to speak.

· Listen to an example

Touch to play a brief sample of the speech synthesizer, using your current settings.

Pointer speed

Touch to open a dialog where you can change the pointer speed. Touch \mathbf{OK} to confirm.

11.3.4 Backup and reset

Back up my data

Mark the checkbox to back up your phone's settings and other application data to Google servers, with your Google account. If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google account. If you mark this option, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google servers.

Back up account

Touch to back up your account.

Automatic restore

Mark the checkbox to restore your backed up settings or other data when you reinstall an application.

DRM reset

Touch to delete all DRM licenses.

Factory data reset

Phone reset will erase all of your personal data from the internal phone storage, including information about your Google account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your phone storage, such as music or photos. If you mark the checkbox - Reserve the content of Phone storagell before touching **Reset phone**, any files stored on your

phone's storage will not be erased. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Press the **Volume up** key and the **power** key at same time until the screen lights up.

11.4 Accounts

Use these settings to add, remove, and manage your email and other supported accounts. You can also use them to control details of the ways applications send, receive, and synchronize data; if this is according to their own schedules; and whether all applications can synchronize user data automatically.

II.5 System

11.5.1 Date & time

Use Date & Time settings to customize your preferences for how date and time are displayed.

Automatic date & time

Touch to select Use network/GPS provided time or Off.

Mark the checkbox to use network-provided time or use GPS provided time.

Automatic time zone

Mark the checkbox to use the network-provided time zone. Or unmark to set all values manually.

Set date

Touch to open a dialog where you can manually set the phone's date.

Set time

Touch to open a dialog where you can manually set the phone's time.

Select time zone

Touch to open a dialog where you can set the phone's time zone.

Use 24-hour format

Mark the checkbox to display the time using 24-hour clock format.

Select date format

Touch to open a dialog where you can select the format for displaying dates.

II.5.2 Scheduled power on & off

Touch to set the power on & off time for every day or specified days.

11.5.3 Accessibility

Accessibility settings can be used to configure any accessibility plug-ins you have installed on your phone.

TalkBack

Touch to turn on/off TalkBack.

Captions

Touch to turn on/off and to choose from different options.

Magnification gestures

Touch to turn on/off and to activate/deactivate the zoom in/out function by triple-tapping the screen.

Speak passwords

Mark the checkbox to speak passwords while typing.

Headset mode

When headset is plugged in, you may mark the checkbox to enable this function.

Accessibility shortcut

Touch to turn on/off to enable/disable accessibility features.

Touch & hold delay

Touch to adjust the duration of touch and hold delay. This function enables your phone to differentiate between touch and touch & hold, which may avoid incorrect operations.

II.5.4 Developer options

To access this function, touch **Settings\About phone**, then touch **Build number** 7 times. Now **Developer options** is available.

The Developer options screen contains settings that are useful for developing Android applications. For full information, including documentation of the Android applications and development tools, see the Android developer website (http://developer.android.com).

Desktop backup password

Touch to set/change/remove desktop full backup password.

Stay awake

Mark the checkbox to prevent the screen from dimming and locking when the phone is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the phone for long periods of time, or the screen may be marked with that image.

USB debugging

Mark the checkbox to permit debugging tools on a computer to communicate with your phone via a USB connection.

Power menu bug report

Mark the checkbox to include the option of submitting a bug report in the power menu.

Allow mock locations

Mark the checkbox to permit a development tool on a computer to control where the phone believes it is located, rather than using the phone's own internal tools for this purpose.

119

Select debug app

Touch to select debug app.

Verify apps over USB

Mark the checkbox to check apps over USB.

Show touches

Mark the checkbox to show visual feedback for touches.

Pointer location

Mark the checkbox to show current touch data.

Show layout bounds

Mark the checkbox to show clip bounds, margins, etc.

Show GPU view updates

Mark the checkbox to show GPU view updates.

Show hardware layers updates

Mark the checkbox to show hardware layers updates.

Show GPU overdraw

Mark the checkbox to show GPU overdraw.

Show surface updates

Mark the checkbox to show surface updates.

Window animation scale

Touch to adjust the animation scale for your window.

Transition animation scale

Touch to adjust the animation scale while performing a transition.

Animation duration scale

Touch to adjust the animation duration scale.

Disable HW overlays

Mark the checkbox to select to always use GPU for screen compositing.

Force GPU rendering

Mark the checkbox to enforce the use of 2D hardware acceleration in applications.

Force 4x MSAA

Mark the checkbox to enable 4x MSAA.

Strict mode enabled

Mark the checkbox to enable strict mode. Once enabled, the screen will flash when applications do long operations on the main thread.

Show CPU usage

Mark the checkbox to show current CPU usage.

Profile GPU rendering

Mark the checkbox to use 2D hardware acceleration in applications.

Enable OpenGL traces

Touch to adjust OpenGL traces.

Enable traces

Touch to adjust traces.

Don't keep activities

Mark the checkbox to destroy all activities as soon as you leave.

Background process limit

Touch to change the limit for background processes.

Show all ANRs

Mark the checkbox to show "Application Not Responding" dialogs for background applications.

11.5.5 About phone

This contains information on items ranging from legal information, model number, firmware version, baseband version, kernel version, build number etc. related to the following:

System updates

Touch to check for system updates.

System udpates(storage)

Touch to check for system udpates (storage).

Status

This contains Battery status, Battery level, My phone number, Network, Signal strength, etc.

Legal information

Touch to view legal information.

Making the most of your phone.....

12.1 FOTA Upgrade

To access **System Updates**, please open **Settings\About phone\ System updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch **Download**, after it's done please touch **Install** to complete the upgrade. You should turn on data connection or connect by Wi-Fi before searching for updates. Settings for auto-check intervals and reminders about upgrades are also available once you restart the phone.

If you have chosen auto-check, when the system discovers the new version, the \uparrow icon will appear in the status bar. Touch the notification to access the System Updates directly.

Accessories

The latest generation of ALCATEL ONETOUCH mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

- I. Charger
- 2. USB cable
- 3. Battery
- 4. SIM tool



Only use your telephone with the ALCATEL ONETOUCH batteries, chargers and accessories in your box.

4 TCT Mobile Inc. Warranty

TCT Mobile Inc. warrants to the original retail purchaser of this wireless device that should this product or part thereof during normal consumer usage and condition be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt from an authorized sales agent. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used:
- Connection to any equipment not supplied or not recommended by TCT Mobile Inc.;
- Modification or repair performed by individuals not authorized by TCT Mobile Inc. or its affiliates;
- Changes to the device operating system by the user or third party applications;
- Acts of god such as inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;

- Removal or altering of the wireless device's event labels or serial numbers (IMEI);
- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
- Rooted devices
- Damage as result of physical abuse regardless of cause.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile Inc. or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

How to obtain Support: Contact the customer care center by calling 855-368-0829 or going to (http://www.alcatelonetouch.com/usa/). We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition, you may utilize our out of warranty repair options.

How to obtain Hardware Service within the terms of this warranty: Create a user profile (alcatel.finetw.com) and then create an RMA for the defective device. Ship the device with a copy of the original proof of purchase (e.g. original copy of the dated bill of sale, invoice) with the owner's return address (No PO Boxes accepted), wireless carrier's name, alternate daytime phone number, and email address with a complete problem description. Only ship the device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center. TCT Mobile Inc. is not responsible for devices that do not arrive at the service center or are damaged in transit. Insurance is recommended with proof of delivery. Upon receipt, the service center will verify the warranty conditions, repair, and return your device to the address provided in the RMA

5 Troubleshooting.....

Before contacting the service centre, you are advised to follow the instructions below:

- Fully charge () the battery.
- Avoid storing large amounts of data on your phone as this may affect its performance.
- Use Factory data reset and the upgrade tool to perform formatting
 or software upgrading (to reset factory data, hold down the power
 key and the Volume up key at the same time). ALL User phone data:
 contacts, photos, messages and files, downloaded applications will be lost
 permanently.

My phone cannot be switched on or is frozen

- When the smartphone cannot be switched on, charge for at least 20 minutes to ensure the minimum battery power needed, then try to switch on again.
- When the smartphone falls into a loop during power on-off animation and the user interface cannot be accessed, press and hold the Volume down key to enter Safe Mode. This eliminates any abnormal OS booting issues caused by 3rd party APKs.
- If neither method is effective, please reset the phone using the Power key and the Volume up key, (holding both together).

My smartphone has not responded for several minutes

Restart your smartphone by pressing and holding the Power key.

My phone turns off by itself

- Check that your screen is locked when you are not using your smartphone, and make sure the **Power** key is not accidentally contacted while the screen is unlocked.
- Check the battery charge level.

My smartphone cannot charge properly

- Make sure that your battery is not completely discharged; if the battery power has been empty for a long period of time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.

My smartphone cannot connect to a network or "No service" is displayed

- Try connecting in another location.
- Verify network coverage with your operator.
- · Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually.
- Try connecting at a later time if the network is overloaded.

My phone cannot connect to the Internet

- Check that the IMEI number (press *#06#) is the same as the one printed on your warranty card or box.
- Make sure that the internet access service of your SIM card is available.
- · Check your phone's Internet connecting settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

Invalid SIM card

- Make sure the SIM card has been correctly inserted (see "Inserting or removing the SIM card").
- Make sure the chip on your SIM card is not damaged or scratched.
- Make sure the service of your SIM card is available.

Unable to make outgoing calls

- Make sure you have dialled a valid number and have touched Call.
- For international calls, check the country and area codes.
- Make sure your phone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- Make sure you have not barred outgoing calls.
- Make sure that your phone is not in airplane mode.

Unable to receive incoming calls

- Make sure your phone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit, SIM card valid, etc.).
- · Make sure you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your phone is not in airplane mode.

The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

I cannot find my contacts

- Make sure your SIM card is not broken.
- Make sure your SIM card is inserted properly.
- Import all contacts stored in SIM card to phone.

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the Volume Up/ Down key.
- Check the network strength
- Make sure that the receiver, connector or speaker on your smartphone is clean.

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an ALCATEL ONETOUCH accessory.

When I select a number from my contacts, the number cannot be dialled

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

I am unable to add a contact in my contacts

 Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

• Contact your network operator to check service availability.

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "Voicemail number".
- Try later if the network is busy.

I am unable to send and receive MMS

- · Check your phone memory availability as it might be full.
- Contact your network operator to check service availability and check MMS parameters.
- Verify the server centre number or your MMS profile with your operator.
- The server centre may be swamped, try again later.

SIM card **PIN** locked

 Contact your network operator to obtain the PUK code (Personal Unblocking Key).

I am unable to connect my smartphone to my computer

- Check that your USB driver is installed properly.
- · Check that you have marked the checkbox of USB debugging.
- To access this function, touch Settings\About phone, then touch Build number 7 times. Then touch Settings\Developer options\ USB debugging.
- Make sure that you're using the correct cable from the box.

I am unable to download new files

- · Make sure there is sufficient phone memory for your download.
- · Check your subscription status with your operator.

The smartphone cannot be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your smartphone is visible to other users.
- Make sure that the two phones are within Bluetooth's detection range.

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 2.5 hours).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- · Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

The smartphone will become warm following prolonged calls, game playing, internet surfing or running other complex applications.

 This heating is a normal consequence of the CPU handling excessive data. Ending above actions will make your smartphone return to normal temperatures.

6 Specifications.....

Processor	MTK6592
Platform	Android™ 4.4
Memory	I6GB emmc + 2GB DDR2 RAM/32GB emmc + 2GB DDR2 RAM
Dimensions (LxWxT)	140.4 × 69.1 × 7.9 mm
Weight	Around 125 grams with battery
Display	5-inch IPS touchscreen with 1920×1080 Full HD Capacity resolution
Network	GSM:
	Quad-band 850/ 900/ 1800/1900 MHz
	UMTS:
	Dual band 900/2100 MHz
	(Band frequency and data speed are operator dependent.)
GPS	Assisted GPS/Internal GPS antenna
Connectivity	Bluetooth V4.0/A2DP
	• Wi-Fi IEEE 802.11 b/g/n
	• 3.5 mm audio jack
	• micro-USB

Audio supported formats	AAC, AAC+, APE, AMR, MP3, Midi, MP2, Vorbis FLAC
Video supported formats	H.263, MPEG4, H.264, XVID, VP8, VC-I
Battery (1)	Rechargeable Lithium-ion battery Capacity: 2500 mAh
Special Features	G-sensorLight SensorProximity SensorE Compass
Note: Specifications are subject to change without prior notice.	

• 13 megapixel back camera • VGA 2 megapixel front camera

Camera

ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.

© Copyright 2014 TCT Mobile Limited All rights reserved

> TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

English - CJA332DALAAA

The original battery has undergone rigorous safety inspections to meet qualification standards, the use of non-original batteries may be dangerous.